


AB-190P/190PL

Exploded View

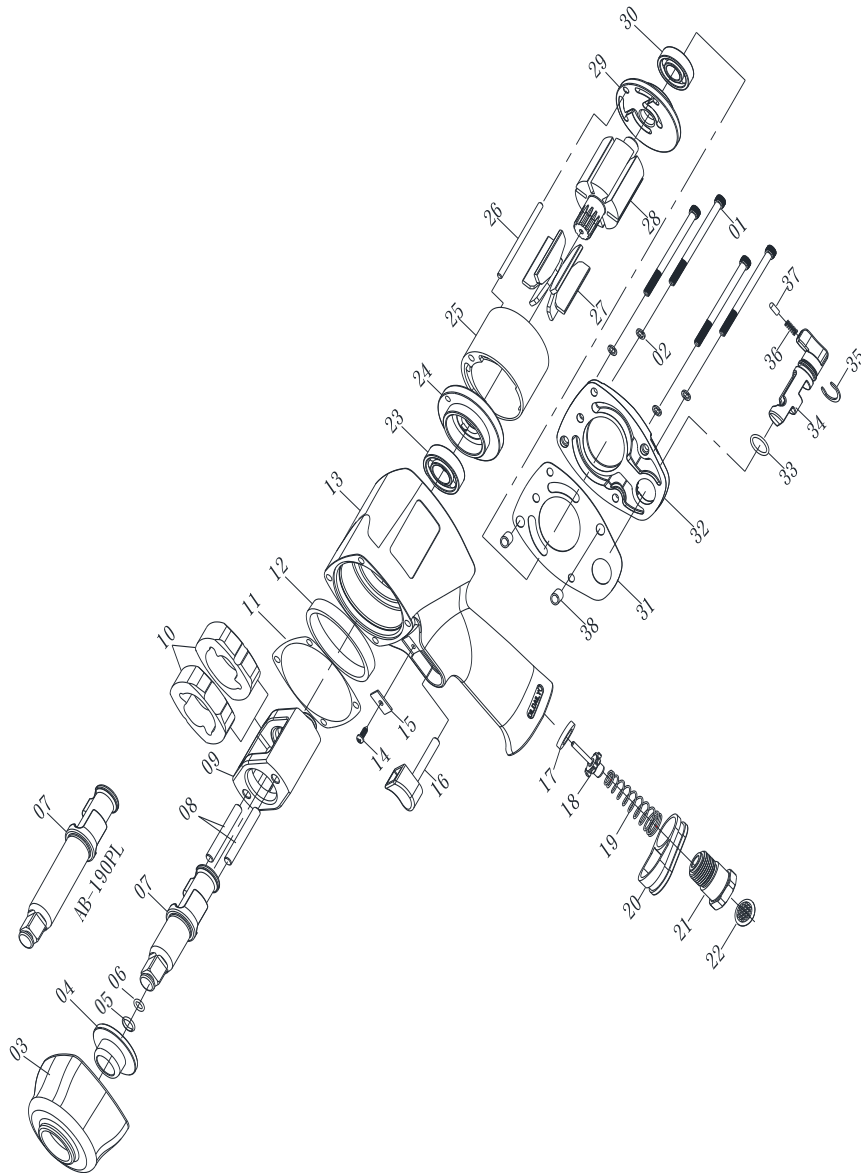

Parts List

NO.7

Index No.	Parts No.	Description	No. Req'd	Index No.	Parts No.	Description	No. Req'd
1	0880080	Screw	4	25	1900018	Liner	1
2	0800016	Washer	4	26	0840149	Pin	1
3	1900110	Clutch Housing	1	27	1900008	Vane	6
4	1900113	Housing Bushing	1	28	1900105	Rotor	1
5	0810006	Circlet	1	29	1900103	Rear End Plate	1
6	0850003	"O"Ring	1	30	0860003	Bearing	1
7	1900109	Anvil Shank	1	31	0890056	End Plate Gasket	1
8	0840093	Pin	2	32	1900102	Housing Cover	1
9	1900107	Hammer Frame	1	33	0850078	"O"Ring	1
10	1610030	Hammer	2	34	1900106	Reverse Valve	1
11	0890052	End Plate Gasket	1	35	0820009	Circlet	1
12	0800114	Washer	1	36	0810081	Spring	1
13	1900101	Motor Housing	1	37	0840171	Pin	1
14	0880042	Screw	1	38	0840169	Pin	2
15	0900011	Washer	1				
16	1610008	Trigger	1				
17	0800121	Washer	1	AB-190PL			
18	1610007	Throttle Valve	1	7	1900115	Anvil Shank	1
19	0810046	Spring	1				
20	1900013	Exhaust Deflector	1				
21	1900015	Air Strainer	1	AB-190P-1/AB-190PL-1			
22	0800011	Washer	1	21	1900024	Air Strainer	1
23	0860026	Bearing	1	AB-190P-2/AB-190PL-2			
24	1900104	Front Plate Gasket	1	21	1900020	Air Strainer	1

※We reserve the right to make changes to the designs of the parts without prior notice.